

INSTALLATION INSTRUCTIONS

DRANJER™ CBR-9

For Dranjer Model CBR-9

For catch basin floor drains – fits for drains from 5 ¾ to 9 inches.


Replace the strainer plate of your exiting catch basin drain with Dranjer CBR9 – combines protection from infiltration of radon gas with high water flow

To Install the Dranjer™ CBR-9

Step one:


Trace the outline of your strainer plate

Placing the strainer Plate at the bottom of the CBR9

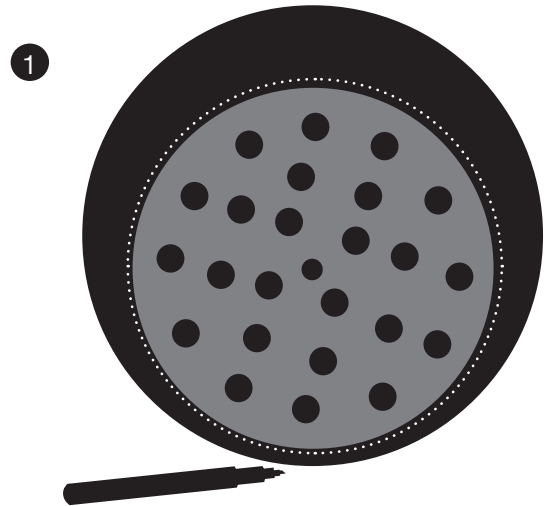

Step two:

Trim to size with a jig saw

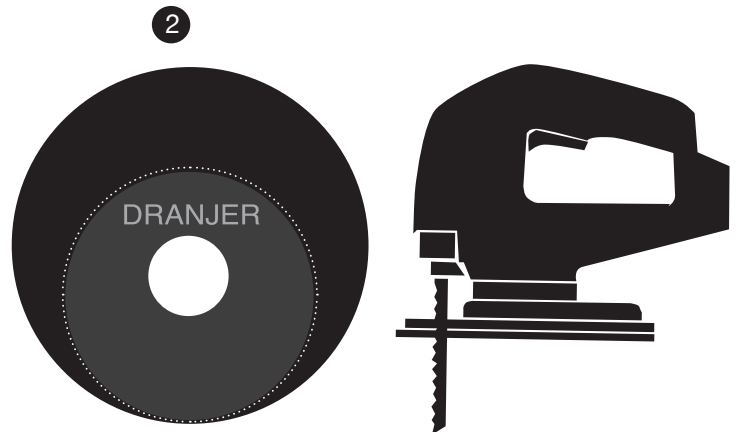

Step three:

Bolt the Dranjer valve to the bottom of the trimmed plate and place it back in your floor drain – replacing your strainer plate.

Use petroleum jelly to seal the edges or a silicon-based caulk.

