

INSTALLATION INSTRUCTIONS

DRANJER™ DR2

Retrofit Floor Drain Model





The Dranjer™ is placed under the existing floor drain cover plate. The cover plate is then replaced.

The Dranjer™ DR2 fits floor drains from 2 in. to 8 in. Model JS15 is available for sumps. See your retailer for these units.

To Install the Dranjer™ DR2

1. Remove the floor drain cover plate from the drain opening.
2. Clean the rim of the opening.
3. Lay a bead of caulking compound around the rim of the hole, as shown in Figure 1.
4. Hold the Dranjer™ and the cover plate together so the centers are aligned and the cover plate on top, as shown in Figures 2 and 3.
5. Lower the Dranjer™ and the cover plate back into the hole. Push the floor drain cover plate back into position, pinching the rubber flange of the Dranjer underneath as it is shown in Figure 4.
6. Apply pressure to the cover plate to set it firmly.
7. Trim off the surplus rubber around the edge of the flange with a knife. **Leave tabs to facilitate removal.**
8. Leave a heavy weight on the floor drain cover plate until the caulking compound has dried.
9. Pour about one pint of water into the drain to fill the Dranjer™.

Note: If dirty water routinely flows through the Dranjer™, deposits may stop the sliding ring seal from working properly. Regular cleaning of the Dranjer™ will prevent this.

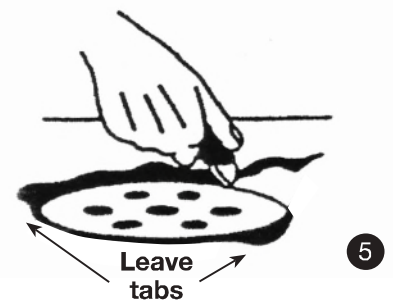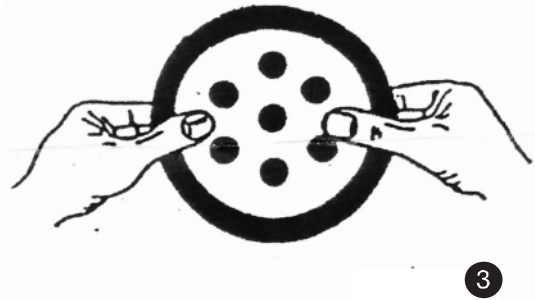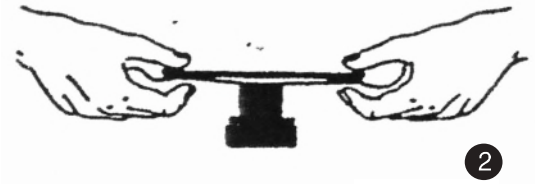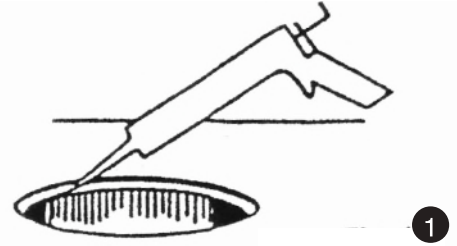

Dranjer™ Corporation

Dranjer.com