Dranjer[™] Instruction Sheet JS15 SUMP VALVE


Thank you for your purchase of the Dranjer[™] JS15.

This product is designed to fit into and become part of your sump cover. It is a one-way valve that allows water to flow into the sump but prevents Radon Gas, soil gas, insects and odours from entering your living environment.

To install the JS15:

- 1. With a 2-inch hole saw cut a hole into the sump cover
- 2. Place the JS15 on the bottom of the sump cover and mark the location for the screws
- 3. Drill two 3/16" holes in the sump cover.
- 4. Place a bead of silicon caulking on the upper surface of the JS15.
- 5. Fit the JS15 to the bottom of the sump cover using the alignment collar, which protrudes around the top of the JS15.

Mark and drill two 3/16" holes into sump cover, caulk and secure valve with nuts and bolts provided

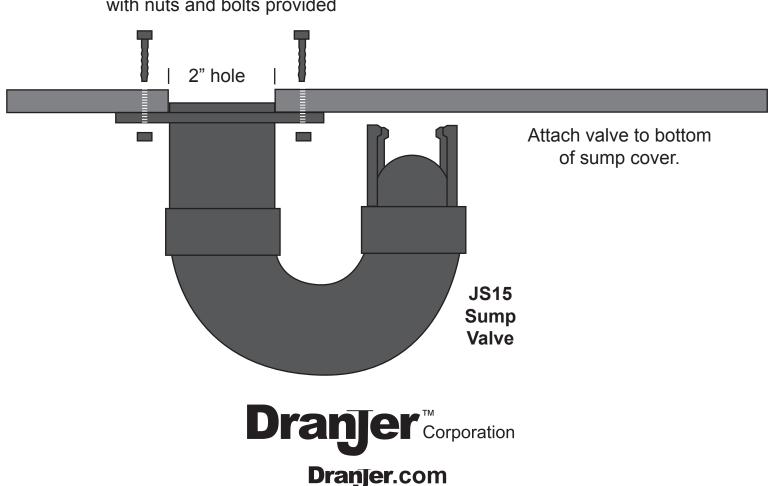

e alignment