


INSTALLATION INSTRUCTIONS

DRANJER™ FN2

To Install the Dranjer™ FN2

1. Using PVC Solvent cement, bond housing to anchor flange and to any downstream plumbing.
2. For new floors, pour the concrete around the anchor flange/housing assembly to a level equal to the top of the anchor flange. The reverse bevel on the anchor flange will prevent the assembly from lifting out of the concrete after it is set. *(For existing floors, drill or chip away a 3" diameter hole. Set the anchor flange/housing assembly into the hole and backfill the space remaining with suitable concrete bonding compound.)*
3. Install the Dranjer™ seal assembly into the anchor flange. for an enhanced seal, a light coating of petroleum jelly or other light grease on the anchor flange seal can be applied.

Your Dranjer™ unit is now in place and functional.

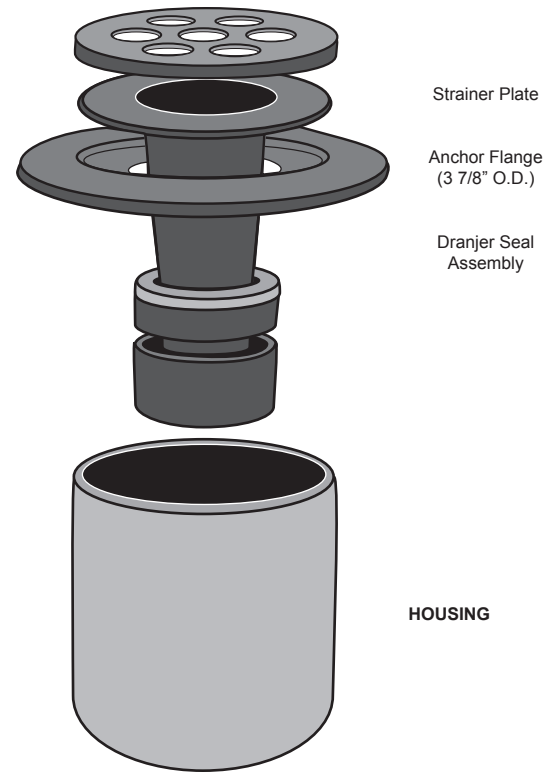

MAINTENANCE:

If the floor drain is used as a drain on a regular basis, rather than as a safety drain only, then periodic cleaning of the seal assembly is advised. Simply remove the strainer plate and rinse with clean water.

